

Using your remote control

For additional settings and information, please visit www.etcnow.com then go to customer support tab

System On/Off

Turns on/off two, three, four or all five devices with one button press.

Menu

Displays the i-Guide Menu.

Guide

Displays the program guide listings.

Settings

Displays the I-Guide Settings Menu.

OK

Selects highlighted screen options.

Help

Opens Help.

Vol \wedge , \vee

Raises or lowers the sound level.

Day +/-

Skip forward or backward a whole day in the program guide.

Mute

Silences the audio. Press to activate. Press this key again to restore sound to the previous level.

Fav

Views favorite channels.



Replays the previous few seconds of a program.

List

Displays a list of programs that you have recorded, allowing you to select one for viewing.

PPV

Direct access to Pay Per View.

On/Off

Opens or closes the PIP window.

Input

Selects the video source on your television.

Swap

Switches a dual tuner DVR between the two tuners. On a television, switches the channels between the PIP and the main screen.



Power

Allows you to turn on and off your TV, VCR, DVD, AUX and CABLE box.

AUX, DVD, VCR, TV, CBL

Used to select the device you wish to operate and indicates remote control activity.

Info

Displays information about the program currently playing or highlighted in the program guide.

Page +/-

Accesses pages above or below the information currently displayed.

Exit

Exit from current screen.



Highlight an item from the on-screen choices.

A, B, C

Currently not in use.

Ch \wedge , \vee

Selects the next higher or lower channel.

Last

Accesses the previously tuned channel.

Live

Displays live television programming.

VCR/DVD/VOD Keys

Perform standard VCR and DVD functions when in VCR and DVD mode, and TV On Demand functions when in CABLE mode*.

Number Pad

Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the Ch +/- and the guide as alternate ways to tune to channels.

Aspect

Change the viewing aspect.

+/-

Selects the next higher or lower channel in the PIP window.

Move

Moves the PIP window to another location on the screen.

VOD

Direct access to TV On Demand.

Note: Your remote may vary from the one shown here; however, the basic functions should remain the same.